

xD

2008

EMAIL

www.scion.com

→ Contact

-

CHAT

www.scion.com

→ Have a Question?

→ Contact

-

PHONE

1.866.70.SCION

-

MAIL

SCION

19001 S. Western Ave.

D102, P.O. Box 2742

Torrance, CA 90509-2742

USA

-

WEB

www.scion.com

-

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.

©2008 Scion, a marque of
Toyota Motor Sales, U.S.A., Inc.

00505-QRG08-XD



what moves you

2008 Scion xD

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Scion xD.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Scion xD operations. Every Scion xD owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed “**⚠CAUTION**” information highlighted throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	7
FEATURES/OPERATIONS	
Air Conditioning/Heating	12
Automatic Transmission	8
AUX audio jack	13
Bottle holders	14
Clock	12
Cruise control	11
Cup holders	15
iPod jack	14
Lights & turn signals	10
Multi-information display	15
Parking brake	8
Power outlet	14
Seat adjustments	9
Seat-Folding down rear seat	9
Seats-Head restraints	12
Steering wheel switches	13
Tilt steering wheel	8
Windows	11
Window wipers & washers	10
SAFETY AND EMERGENCY FEATURES	
Door locks	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	16
Spare tire & tools	17
Tire Pressure Warning System reset	17

¹ Visit your Toyota dealer for information on customizing this feature.

OVERVIEW

Instrument panel

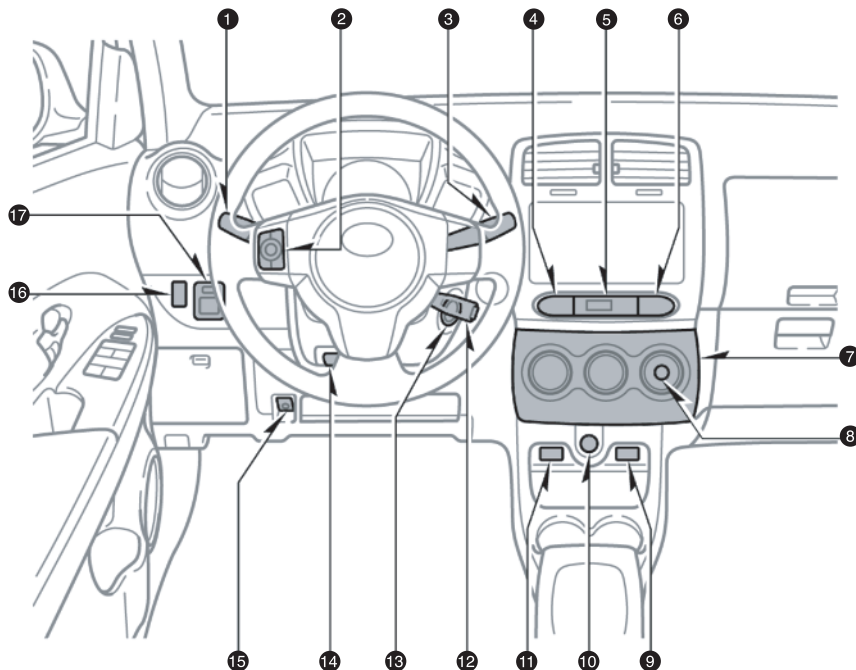


- ① Headlight and turn signal controls
- ② Steering wheel audio controls¹
- ③ Wiper and washer controls
- ④ Emergency flasher button
- ⑤ Clock
- ⑥ Front passenger occupant classification indicator/
Front passenger seat belt reminder light
- ⑦ Air Conditioning controls
- ⑧ Rear window defogger button

- ⑨ iPod jack¹
- ⑩ 12V DC Power outlet
- ⑪ AUX audio jack¹
- ⑫ Cruise control
- ⑬ Engine switch
- ⑭ Tilt steering lock release
- ⑮ Tire Pressure Warning System reset
- ⑯ Instrument panel light control dial
- ⑰ Power rearview mirror controls

¹ For details, refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual*.

Instrument cluster

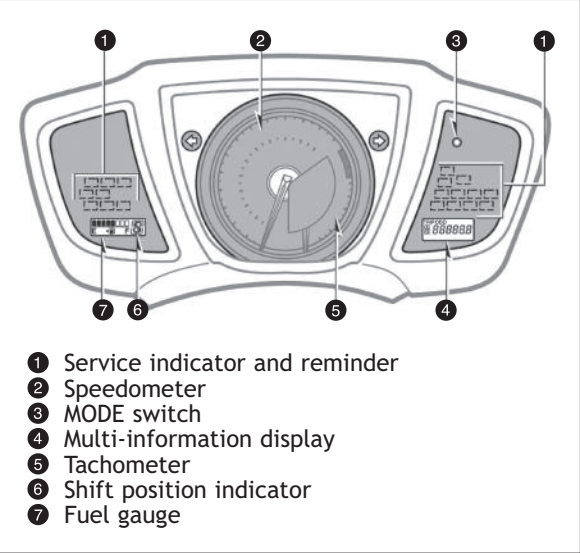

Indicator symbols

	Brake system warning ¹
	Driver seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Low Tire Pressure Warning ¹
	Low windshield washer fluid level warning ¹

	Low engine coolant temperature indicator ²
	High engine coolant temperature warning ¹
	Engine oil replacement reminder ¹
	Front passenger occupant classification indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Low fuel level warning ¹
	Slip indicator
	Vehicle Stability Control “OFF” indicator
	Cruise control indicator ³
	Electric power steering system warning ¹
	Anti-lock Brake System warning ¹

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2008 Owner’s Manual.
² For details, refer to “Engine coolant temperature indicator and warning light,” Section 1-6, 2008 Owner’s Manual.

³ If this light flashes, refer to “Cruise control,” Section 1-7, 2008 Owner’s Manual.

Keyless entry

Locking operation

Push



Unlocking operation

Push ONCE: Driver door
TWICE: ALL doors




NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

Panic button

Push and hold



Fuel tank door release and cap

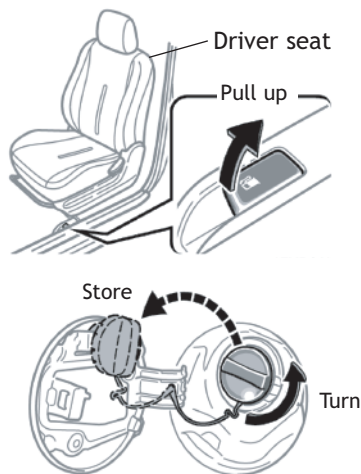


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Light control-Instrument panel


Bright




Dark

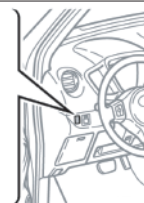

Hood release

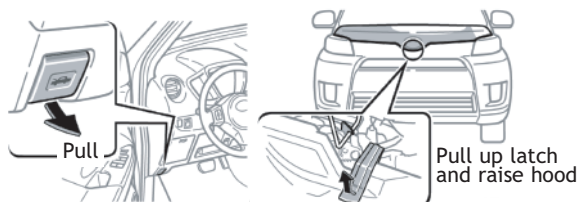

Engine maintenance

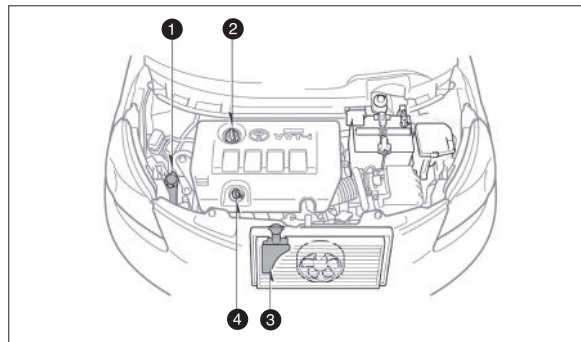

- 1 Windshield washer fluid tank
- 2 Engine oil filler cap
- 3 Engine coolant reservoir
- 4 Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Automatic Transmission (if equipped)

- | | |
|----------|-------------------|
| P | Park ¹ |
| R | Reverse |
| N | Neutral |
| D | Drive |
| 3 | Third gear |
| 2 | Second gear |
| L | First gear |




¹ The engine switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

Set

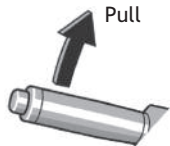


BRAKE

Release

- (1) Pull slightly
- (2) Push
- (3) Lower

Tilt steering wheel

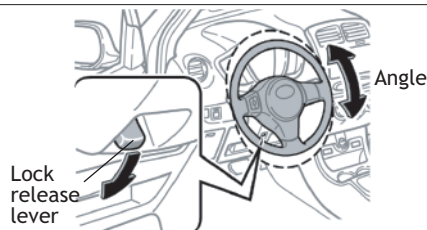

Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.


Seat adjustments

Front



Position Seatback angle

Rear

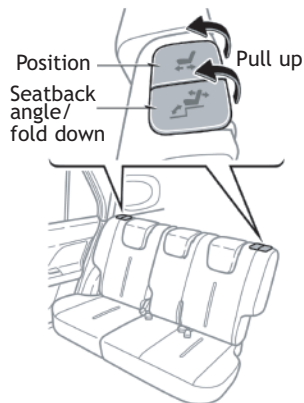


Seat-Folding down rear seat


- (1) Push
- (2) Lower
- (3) Pull up
- (4) Slide forward
- (5) Pull up
- (6) Fold down

Lights & turn signals

Headlights

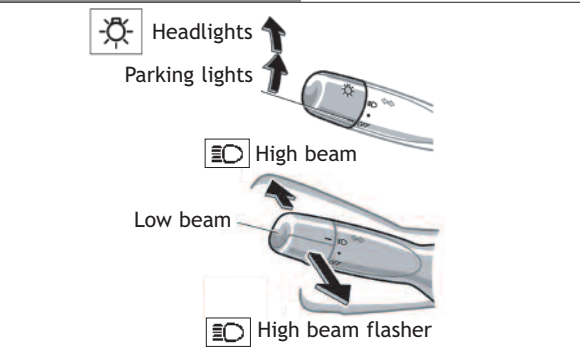


Turn signals

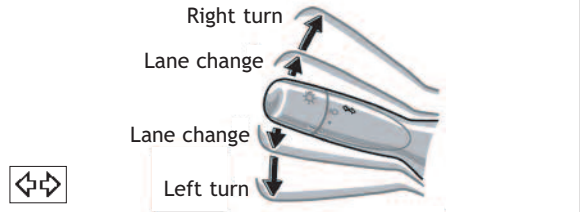


Window wiper & washer


Front

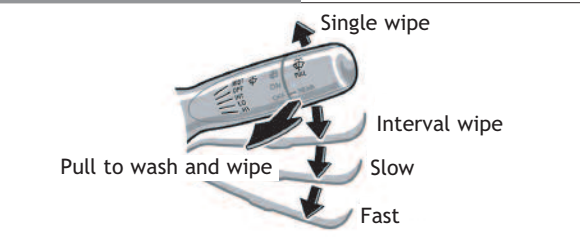

Rear

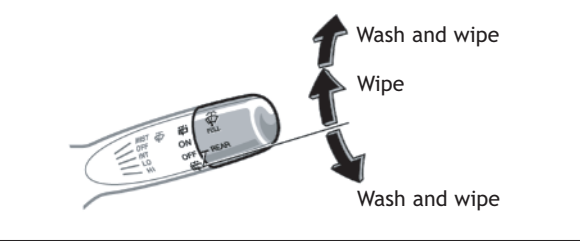

Windows

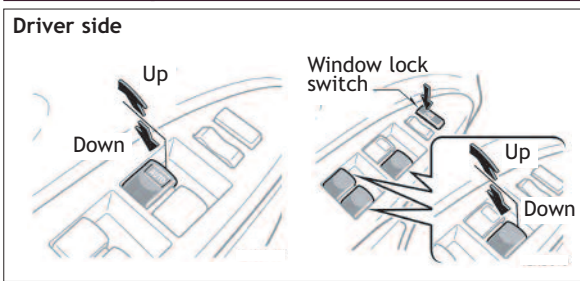


Automatic down operation (driver side only)
Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Cruise control

System ON/OFF

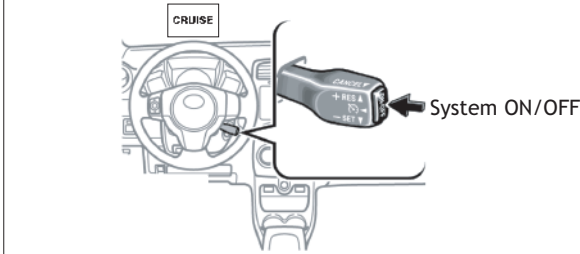


Functions

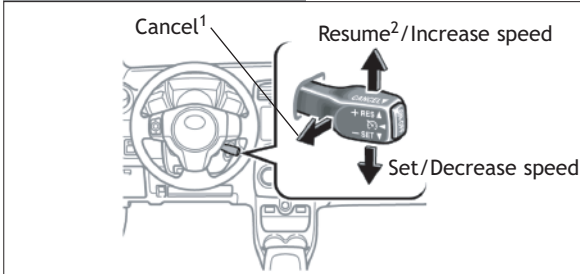


¹ The set speed may also be cancelled by depressing the brake pedal.
² The set speed may be resumed once vehicle speed reaches 25 mph.


Seats-Head restraints

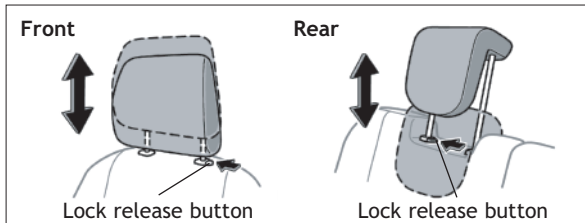


Clock

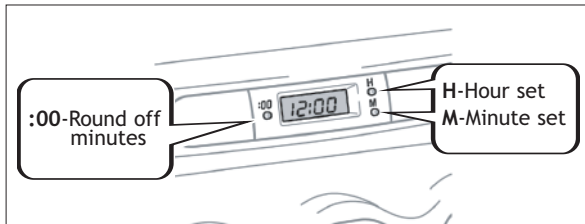

Air Conditioning/Heating

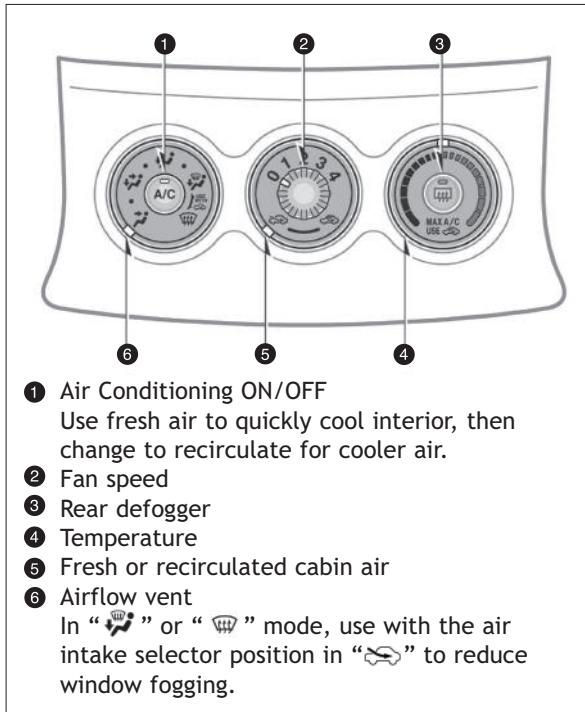


Steering wheel switches

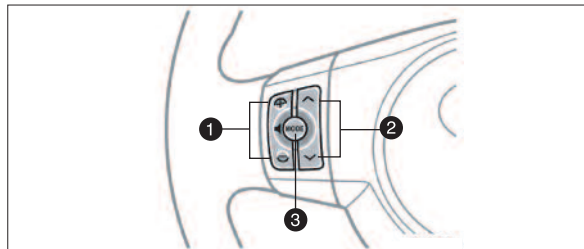

- 1 “- +”**
Volume control
- 2 “V ^”**
-In **radio mode** Push to select a preset station; push and hold to seek the next strong station.
-In **CD mode** Push to skip up or down to a next/previous track.
- 3 “MODE”**
Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

AUX audio jack

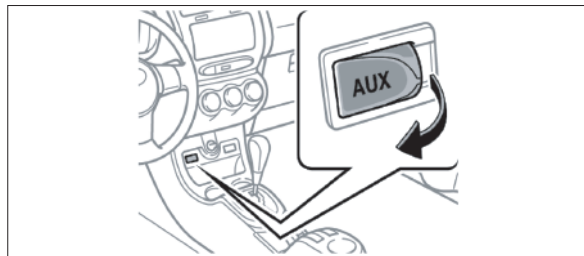


By inserting a mini plug (not included) into the AUX jack, you can listen to music from a portable audio device through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the AUX jack.

Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

iPod jack

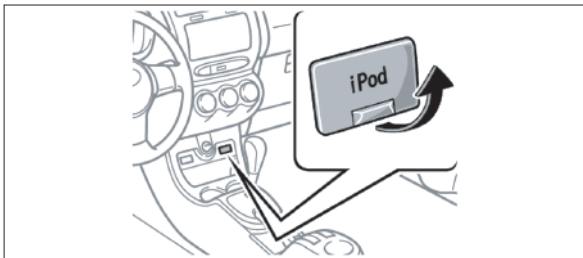


By inserting an iPod customer cable connector into the iPod jack, you can charge the iPod battery and listen to music from your iPod through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the iPod jack.

Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

Power outlet


12V DC

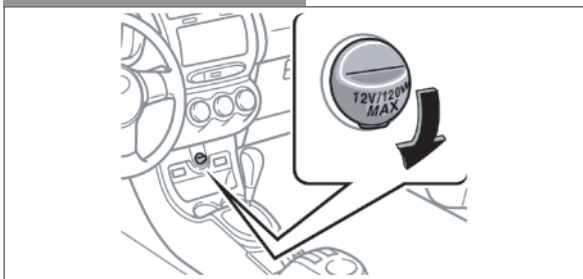


Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.

Bottle holders


Front

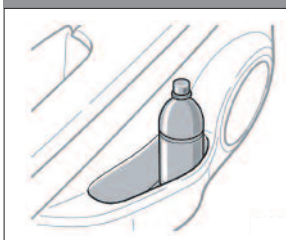

Rear

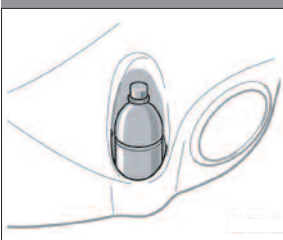

Multi-information display

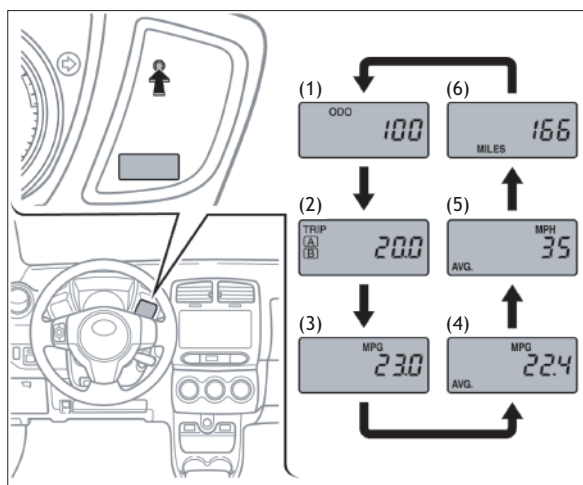


Push button to change information in the following succession:


- (1) Odometer
- (2) Trip meters
- (3) Current gas mileage (MPG)
- (4) Average gas mileage (AVG/MPG)
- (5) Average vehicle speed from engine start (AVG/MPH)
- (6) Miles left on remaining fuel (RANGE/MI)

Cup holders


Front

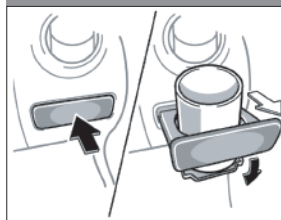

Rear

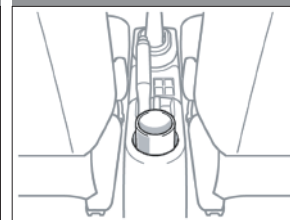


Center

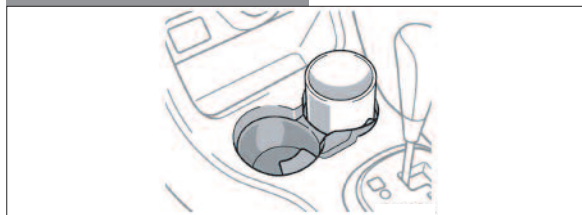


SAFETY AND EMERGENCY FEATURES

Door locks

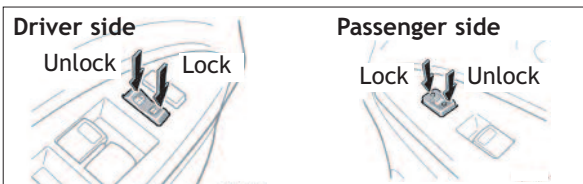


Doors-Child safety locks

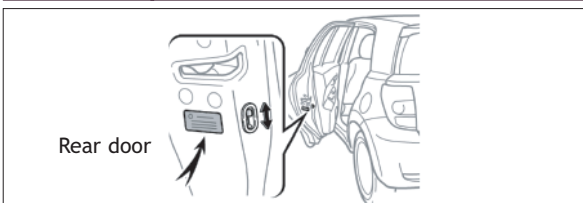


Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

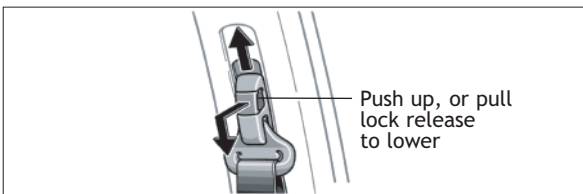


Seat belts

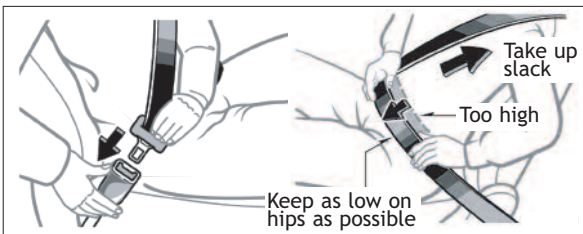

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Warning System reset

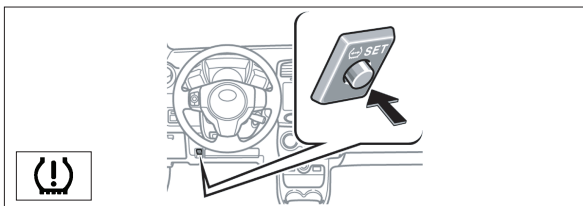


If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing “ SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for details on system reset initialization.


Spare tire & tools

Tool and spare tire location

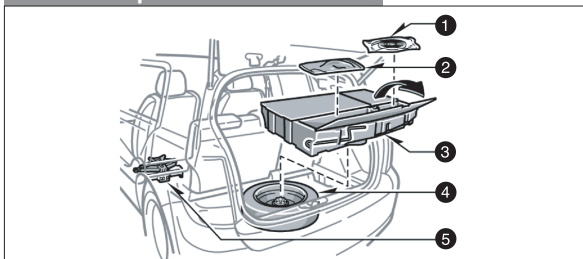

- ① Tire tie-down belt
- ② Tool bag
- ③ Jack handle
- ④ Spare tire
- ⑤ Jack

Removing the spare tire

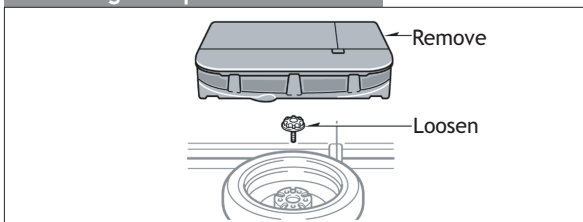

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.